Honeywell

GUIDE TO THE USAGE OF THE CM901 PROGRAMMABLE THERMOSTAT:

The purpose of the unit is to control the temperature of your heating system at times set by you. It responds to the temperature you have set all the time. The display normally shows the time and the actual room temperature (larger characters).

At any time the current set temperature can be viewed by pressing the 'i' button.


Normal Use:


With the cover flap open, move the slider to the **AUTO** position (**AUTO** appears on the display). The thermostat will follow the pre programmed time/temperature changes (refer to the main instructions for guidance on setting these).

To change the set temperature at any time press button to increase or button to decrease the temperature. These are accessible with the flap open or closed. The set temperature will be shown on the display.

At the next programmed time/temperature change it will revert to your preset temperature.

Open Decrease Decrease Decrease Decrease Auto Auto Auto Auto OPF CM901 (1.6) (68)

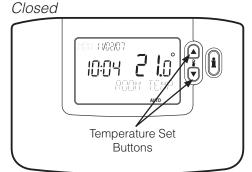

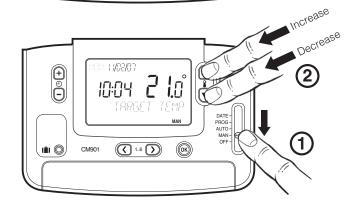

Manual Override:


To override the time settings move the slider to the **MAN** position (**MAN** will appear on the display). This will set a constant temperature 24hrs a day, until reset or changed by you.

To change the set temperature at any time press $ilde{f \triangle}$ button to increase or $ilde{f \nabla}$ button to decrease the temperature.

Turn the Heating off:

To turn off the heating for long periods, for example in the summer time when only Hot Water is needed, move the slider to the **OFF** position (**OFF** will appear on the display).

This will set a temperature level of 5°C to prevent frost damage to your property.

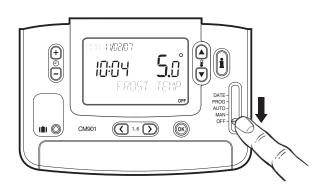

For guidance on the operation of the other buttons please refer to the complete user instructions supplied with the product.