



Notice d'installation

FR



www.deltadore.com

X3D

INPUT 100-240V~ 50-60 Hz 0,3A ⊖–⊂–⊕ OUTPUT : 5V 1.0 A 1 -20°C / +70°C -10°C / +40°C IP 30 100 x 100 x 30 mm

La qualité de la connexion de votre produit peut être altérée par différentes modifications de l'architecture IP sur lequel il fonctionne. Ces modifications peuvent être, de façon non limitative, un changement de matériel, une mise à jour de logiciel ou un paramétrage, intervenants sur les équipements de votre opérateur ou tout autre équipement multimédia tel que tablette, smartphone, etc...» Android™ et Google play sont des marques déposées de Google Inc. IOS™ est une marque dé-posée de Cisco Systems Inc. WiFi est une marque déposée par Wireless Ethernet Compatibility Alliance. En raison de l'évolution des normes et du matériel, les caractéristiques indiquées par le texte et les images de ce document ne nous engagent qu'après confirmation par nos services.

CE Par la présente Delta Dore déclare que l'équipement est

conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive R&TTE 1999/5/CE (radio)







1 Contenu

- A. TYDOM 1.0
- Passerelle domotique pour application DELTA DORE TYDOM smartphone et tablette
- B. Alimentation secteur C. Câble Ethernet
- D. Notice d'installation /
- Important product information
- E. Adaptateur secteur

2 Description

F. Voyant de visualisation de l'état du système

Connexions :

- G. Prise Ethernet
- H. Non utilisé
- I. Prise adaptateur secteur

Touche :

J. Touche de configuration / information

3 Installation

- 3.1 Raccordez votre TYDOM 1.0 en fonction de votre installation
- 3.2 Téléchargez l'application TYDOM
 - 1. Selon votre appareil : Connectez-vous à Google play ou App Store
- 2. Recherchez et télécharger l'application gratuite "TYDOM"
- 3. Activez la connexion WIFI de votre smartphone ou de votre tablette.
- 3.3 Configurez l'application TYDOM • Notez les 6 derniers caractères de l'adresse MAC de votre TYDOM 1.0.
- Ouvrez l'application TYDOM.
- Saisissez les 6 caractères (majuscules) dans le champ «identifiant» puis saisissez votre «mot de passe» (minimum 8 caractères alphanumériques).
- Appuyez sur la touche «Connecter».
- G L'écran d'accueil apparait. Vous êtes connecté.

4 Informations et assistance

Voyant	Etat du système
Battement vert	Système accessible en local et à distance, utilisateur connecté
Vert fixe	Système accessible en local et à distance
Battement orange	Système accessible en local, utilisateur connecté
Orange fixe	Système accessible en local
Rouge fixe	Pas d'adresse IP d'attribuée

Fonctions avancées

DHCP / IP fixe Appuyez au moins 3 secondes sur la touche		
Voyant	Action	
Magenta clignotant (lent)	Relâchez la touche (avant 15 secondes)	

Utilisez de préférence l'application TYDOM pour accéder à cette fonction.

Pas d'adresse IP d'attribuée	Effacer mot de passe Appuyez au moins 15 secondes sur la touche		
	Voyant	Action	
ostic nent sur la touche voyant pendant 10 secondes)	Magenta clignotant (rapide)	Relâchez la touche (avant 30 secondes)	
IP fixe OK	RESET		
DHCB OK / LIDDD OK	Appuyez au moins 30 secondes sur la touche		
	Voyant	Action	
DHCP OK / Upnp Erreur Vérifiez l'activation de Upnp sur la BOX		Relâchez la touche → Utilisation DHCP	
DHCP en cours Vérifiez l'activation du DHCP sur la BOX	⊏tat du systeme	 → Effacement mot de passe → Effacement des associations 	

Exemple d'association de produits







Fonction diagnostic

Jaune

Bleu

Bleu

Bleu clignotant (3x)

Rouge

clignotant

clignotant

clignotant

clignotant (2x)

Appuyez brièvement sur la touche

(visualisation du voyant pendant 10 secondes)

Pas de connexion réseau

Vérifiez la liaison Ethernet









Installation instructions

ΕN



www.deltadore.com

X3D

CE



The connection quality of the product may be affected by different modifications of the IP architecture on which it operates. These modifications can be, but are not limited to, a change of hardware, a software update or configuration, work conducted on your operator's equipment or any other multimedia equipment such as tablets, smartphones, etc." Android™ and Google are registered trademarks of Google Inc. IOS™ is a registered trademark of Cisco Systems Inc. WiFi is a trademark by Wireless Ethernet Compatibility Alliance. Because of changes in standards and equipment, the characteristics given in the text and the illustrations in this document are not binding unless confirmed.

Delta Dore hereby declares that the equipment complies with the essential requirements and other relevant provisions of

R&TTE directive 1999/5/EC (wireless).

В С 1C D





1

Α

1 Contents

- A. TYDOM 1.0 Home automation gateway for application on DELTA DORE TYDOM smartphone and tablet
- B. Mains supply
- C. Ethernet cable

D. Installation instructions/ Important product information

E. AC adapter

2 Description

F. System status display LED

Connections:

G. Ethernet socket

- H. Not used
- I. Mains adaptor socket

Button:

J. Configuration/information button

3 Installation

- 3.1 Connect the TYDOM 1.0 according to your installation
- 3.2 Download the TYDOM application
 - 1. According to the unit: Log in to Google play or App Store
- 2. Search for and download the free "TYDOM" application
- 3. Activate the WIFI connection of your smartphone or tablet.
- 3.3 Configure the TYDOM application
 - Note down the last 6 characters of the MAC address of your TYDOM 1.0.
 - Open the TYDOM application.
 - S Enter the 6 characters (upper case letters) in the "identifier" field then enter your "password" (at least 8 alphanumeric characters).
 - O Press the "Login" button.
 - G The home screen is displayed. You are logged in.

4 Information and support		
LED	System status	
Pulsing green	System accessible locally and remotely, user connected	
Green on and steady	System accessible locally and remotely	
Pulsing orange	System accessible locally, user connected	
Orange on and steady	System accessible locally	
Red on and steady	No IP address allocated	

Diagnostic function

Briefly press the button (LED displays for 10 seconds)

Flashing yellow Fixed IP OK Flashing blue DHCP OK / Upnp OK Flashing blue (2x) DHCP OK / Upnp Error Check the Upnp activation on the BO Flashing DHCP in progress		
Flashing blue DHCP OK / Upnp OK Flashing blue (2x) DHCP OK / Upnp Error Check the Upnp activation on the BO Flashing DHCP in progress	Flashing yellow	Fixed IP OK
Flashing DHCP OK / Upnp Error blue (2x) Check the Upnp activation on the BO Flashing DHCP in progress	Flashing blue	DHCP OK / Upnp OK
Flashing DHCP in progress	Flashing blue (2x)	DHCP OK / Upnp Error Check the Upnp activation on the BOX
blue (3x) Check the DHCP activation on the E	Flashing blue (3x)	DHCP in progress Check the DHCP activation on the BOX

Flashing red	No network connection Check the Ethernet link			
Advanced functions				
DHCP/Fixed IP Press the button for at least 3 seconds				
LED		Action		
Flashing magenta (slowly)		Release the button (before 15 seconds)		
Preferably use t unction.	he	TYDOM application to access this		
Delete password Press the button for at least 15 seconds				
LED		Action		
Flashing magenta (rapid	ly)	Release the button (before 30 seconds)		
RESET Press the button for at least 30 seconds				
LED		Action		
System status		Release the button → Use of DHCP → Password deletion		

Association removal

No network connection

Product association example







F

f



