

THERMOSTAT & TRANSCEIVER COMBI

USER GUIDE



ELECTRONIC PROGRAMMABLE ROOM THERMOSTAT





Outer plastic wheel rotates for temperature adjustment

Transceiver Model may vary dependent on boiler model

FEATURES

- + Simple User Interface
- Summer/Winter Time (GMT/BST) automatically updated
- + Timer Options

7 day: Control of heating 5 + 2: Different at weekends Weekly: All 7 days the same

- + Room Temperature Control
- + Wireless Connection
- + Override
- + Boost

Thermostat Location

The Thermostat should not be located within one metre of any other wireless devices (e.g. WiFi Boosters, Wireless Routers, Sky Boxes)

THERMOSTAT HOME SCREEN




Colour Home Screen

If Central Heating is Timed On or Continuously On then the Target Room Temperature can be adjusted by rotating the outer plastic wheel of the device

If Central Heating is Timed Off then Central Heating can be activated by rotating the outer wheel until the desired Room Temperature is shown (Boost)

TIMED/ON/OFF (OPERATING MODE)

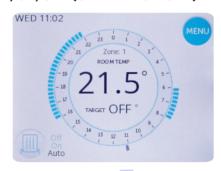

Tap Screen & Press to Change the
Central Heating Operating Mode
(from Timed to Continuously On to Continuously Off)

IMPORTANT INFORMATION:

Suitable for the following products: All Logic and Vogue Combi Models

Class V when used in isolation. Class VI when used with an outside sensor, Class VIII when used with more than 2 zones. Contribution to seasonal space heating energy efficiency 3% (Class V), 4% (Class VI), 5% (Class VIII).





CHANGING CENTRAL HEATING SCHEDULE



Tap the screen Press MENU



Press HEATING SCHEDULE



Press MODIFY



Press on the days you'd like to set



Set the On Time using the up and down arrows

Set ON time for period 1

Press NEXT

Press DONE



Set the Off Time required using the up and down arrows

• 20 0 • »

Set the Temperature required using the + and - buttons



To add another On Period press YES



Press DONE

Press DONE

Press DONE

If no additional periods are required press NO

REVIEW CENTRAL HEATING SCHEDULE



Tap screen and Press MENU



Press HEATING **SCHEDULE**



Press REVIEW



To change the Schedule press EDIT To see the next day press NEXT To exit press EXIT from Sunday's Schedule





OVERRIDE CENTRAL HEATING



Tap the screen Press MENU



Press OVERRIDE HEATING



Press the desired option



Set the time required using the up and down arrows Press DONE



Press DONE

Note: the override period
will be shown by blue
flashing tappets

CANCEL CENTRAL HEATING OVERRIDE



Tap screen and Press MENU



Press CANCEL OVERRIDE



Press the desired option



Press DONE

SETTING THE TIME



Tap screen and Press MENU



Press HELP & SETTINGS



Press CHANGE TIME



Set the On Time using the up and down arrows Press DONE



SETTING THE DATE



Tap screen and Press MENU



Press HELP & SETTINGS




Press CHANGE DATE



Set the date (DD:MM:YY) using the up and down arrows Press DONE

TRANSCEIVER UNIT (BOILER MOUNTED)

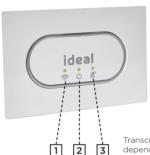

1 Wireless Connection to Programmable Room Thermostat

If this light is off then there is no connection between the boiler and the Room Thermostat

Try replacing the batteries in the Room Thermostat

2 Electrical Supply

If this light is off then there is no power to the transceiver

Check that the isolation switch to the boiler is switched on

3 Boiler Connection

If this light is off then there is no connection from the boiler to the transceiver. The installer should check the wiring from the boiler to the transceiver.

 
Transceiver Model may vary dependent on boiler model

BATTERY REPLACEMENT

- Unclip the Thermostat from its cradle by sliding the Thermostat upwards
- Using a flat bladed screwdriver, pop off the rear cover
- Replace batteries
- Refit battery cover

The screen may go blank, if so gently press the screen or rotate the outer plastic wheel to wake the Thermostat

Batteries should operate for approximately 18 to 24 months. Only good quality alkaline batteries are to be used



CLEANING

For normal cleaning simply dust with a dry cloth. To remove stubborn marks and stains, wipe with a damp cloth and finish off with a dry cloth. DO NOT use abrasive cleaning materials.



WEEE DIRECTIVE 2012/19/EC

Waste Electrical and Electronic Equipment Directive

- At the end of the product life, dispose of the packaging and product in a corresponding recycling centre.
- Do not dispose of the unit with the usual domestic refuse.
- Do not burn the product.
- Remove the batteries.
- Dispose of the batteries according to the local statutory requirements and not with the usual domestic refuse.

Ideal Boilers Ltd.,

P.O. Box 103, National Avenue, Kingston upon Hull, HU5 4JN Telephone: 01482 492 251 Fax: 01482 448 858. Registration No. London 322 137 www.idealboilers.com

