


Installation Instructions & User Guide

Please leave these instructions with the end user

Product code: TFP3005IR (D1)



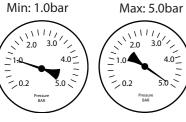

Maximum Static Pressure: 10.0bar

Inlet water temperature **Cold Water Supply** Hot Water Supply -65°C

Min: 5°C Max: 25°C




/ IMPORTANT he inlet hot water must be at east 10°C above the required lend temperature.

Inlet Connections 15mm Compression Inlet centres 73mm

Power Supply: DC- 6V (4 x Alkaline LR6 1.5 V AA, preferably 2000mAh, not supplied) Power Consumption: Static-<0.3MW

Active- <3W Sensing Range: 50mm to 160mm

Tools You'll need

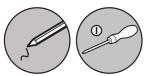




















mark fixing hole

locations.

Installation

Loosen shower head grub screws, remove the shower head, unscrew the nut and remove the o-ring and anti rotation pin from the panel.

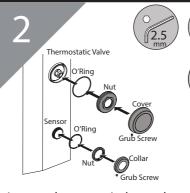

Loosen the sensor/valve grub screws, remove the collar/ cover, remove the nuts and the O-rings from the shower panel.


REMEMBER


Prior to drilling into

walls check there are


o hidden electrical wires

cables or water supply

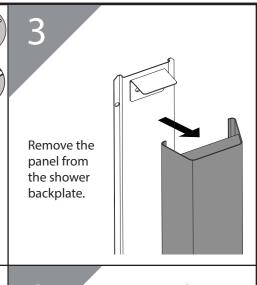

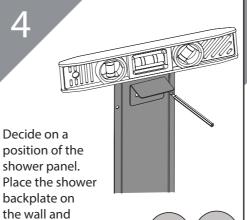



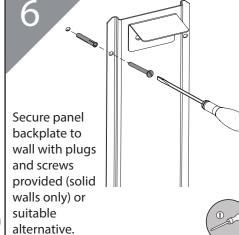

Prior to Installation

All products manufactured and supplied by Bristan are safe provided they are installed, used correctly and receive regular maintenance in accordance with these instructions

This product needs to be installed in accordance with, and meet the requirements of the Water Supply (Water Fittings) Regulations 1999 and Scottish Byelaws 2004.

For product specific installation requirments, please visit www.wras.co.uk

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc.


This product must not be modified in any way as this will invalidate the quarantee.


Full access must be made available for future maintenance / servicing purposes.

If in doubt, contact a registered plumber or your Local Water Authority or the Secretary of the Institute of Plumbing, address as follows;-

The Institute of Plumbing, 64 Station Lane, Hornchurch, Essex. RM12 6NB, Tel: 01708 472791

Pack Contents

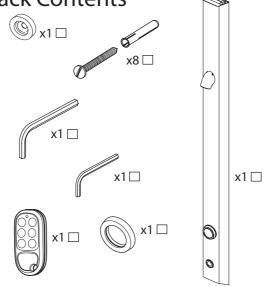

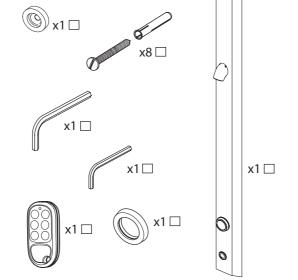



Why not visit our Youtube channel


To see our latest how-to videos, simply scan the QR code with your smart phone or tablet.




Alternatively visit www.youtube.com/bristantv

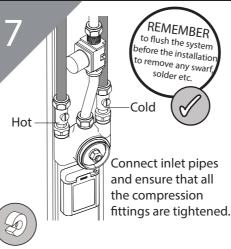

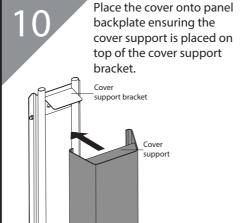


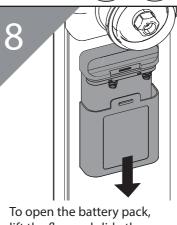


lift the flap and slide the battery pack cover down.

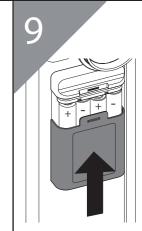



Insert 4 x Alkaline LR6 1.5 V AA (preferably 2000mAh) batteries to the battery pack. Slide the battery pack cover up.

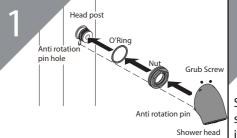

Fit the o'ring into the wall nut and secure wall nut onto head post. Push shower head onto head post ensuring the anti-rotation pin is located in the anti-rotation pin hole and secure with grub screws.

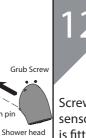

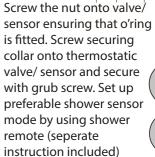

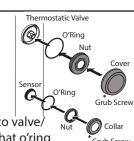











detergents

abrasive

Me recommend REMEMBER

Examine the filters and the flow

Never use

(10l/min yellow)

.qeos blim bna

damp cloth


panel with

to clean the


QninsalD


limiters, clean or replace

f necessary.

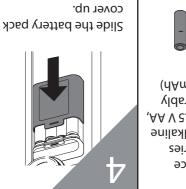



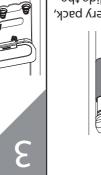

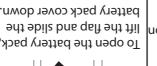




steps from 1 to 3. on. Follow the installation



2.5 Turn Service Mode off.

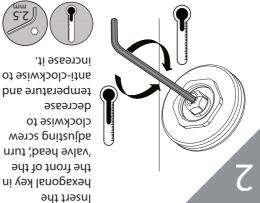



Turn Service Mode off. stabilise the temperature ot woft it gnittel Turn the water on, and remove the cover. Turn Service Mode on

Servicing- flow limiters and filters







Troubleshooting

by tightening the nut.

back onto the shower body

Screw the isolation valves





REMEMBER To service







spray rings.

rings with the blanking

changed by swapping

Spray pattern can be



-\- 15 degrees.

shower head.

inner spray ring from the

Remove the middle and



screw in the

shower head. loosen the screw in the Mode on then Turn Service


spower head.

remove the


'uo əpoW

Turn Service

Spray Pattern Adjusting

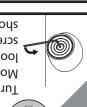

Maintenance - Cartridge Cleaning

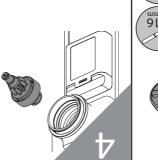

and search for your product.

hardness of your water.

To reduce the build up of

shower why not scan the QR Code

To replace any spare parts for your

Spare Parts

every 6-12 months depending on the


we recommend this shower is serviced

works to its maximum performance

limescale and to ensure this shower



backplate. pipe work or You DO NOT cartridge. Ensure

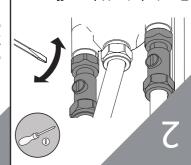

Turn Isolation Valves off

tightening the cartridge nut.

body. Secure in place by

and the cartridge into the

Replace the piston assembly



Turn the Service Mode on and


based grease on all seals. Use WRAS approved silicon all seals and replace if needed. wash off in clean water. Examine components in descaler and Remove any O-rings, soak all




Remove the cartridge and



Furn the Service steps from 10 to 12. Follow installation

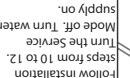

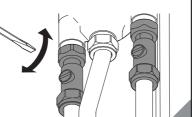

Turn Isolation Valves on.

For any other queries, please call our Customer Service on 03300266273 where our expert team of advisors

uo t turn on

Shower does

irregular spray

Reduced or

low flow rate

No flow or

Symptom

spower morì gniqqirb

Water

battern

To start your free guarantee simply scan the QR code and register your product, alternatively visit www.bristan.com/register.

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on

- We Know & We Core

Turn on mains water supply.

Minimum 2 meters required.

Open isolation valve.

10 to 12. Turn the Service Mode off.

Follow installation steps from

Turn water supply on.

.9vlev noitelosi n9qO

in the descaler.

Refer to the 'Battery replacement' section

Please contact Customer Service at Bristan.

This is caused by capilary action, the build up of water in the

Flush through pipework to ensure removal of debris and any

ncrease water flow rate or pressure through system.

Refer to the 'Spray pattern' section. Clean the shower head inserts

will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/guarantees.

all our products, effective from the date of purchase, to give you peace of mind.

Mains water supply turned off.

Closed isolation valve.

If water continues to drip

minimum distance required.

Head of water is below the as flow rate or pressure is too low.

partially closed isolation valve.

Battery failure (sensor will flash 8 times)

his is normal for a short time after using the

Build up of debris in the shower head.

Airlock or partial blockage in the supply

Instantaneous water heater cycles on and off

Turn Isolation Valves on.

Mode off. Turn water