


WIRED DIGITAL ROOM THERMOSTAT

User Guide


Room temperature

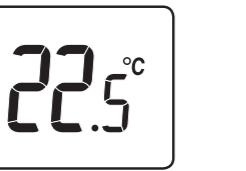

FPP11206

50051982-003-A

Set temperature, inquiry

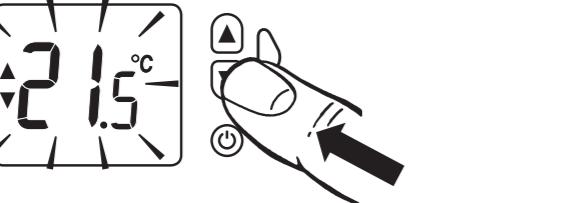

Set temperature, adjustment




Switch ON/OFF
(frost protection enabled)



Operating indicators

Heating demand indicator

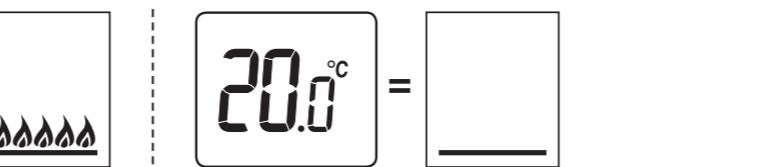


Frost protection
(not available in cooling operation)



Fault indicator





Low battery indicator

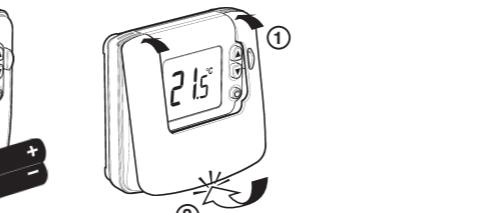


Heat/cool changeover

Installer Parameter "HC"
(Heat/cool changeover)
must be set to "1"

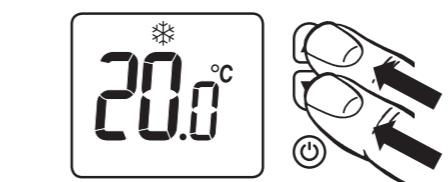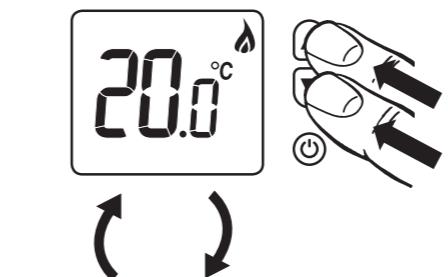


Energy Saving ECO feature


Pressing the green ECO button
gives a timed period at a different,
predefined temperature (18°C)

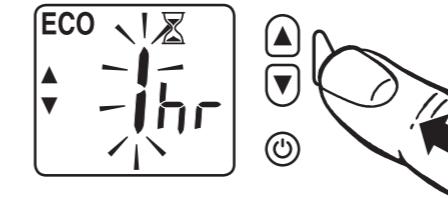


To set the ECO energy savings time period

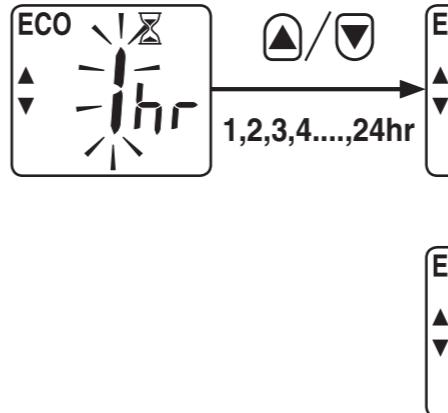


Display shows countdown of
ECO time remaining

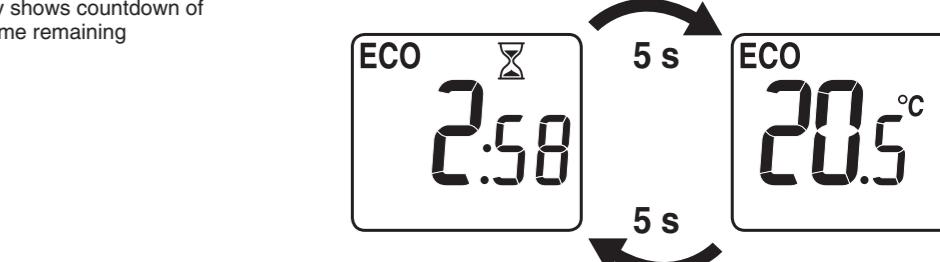

Pressing or will now allow the
ECO temperature to be changed

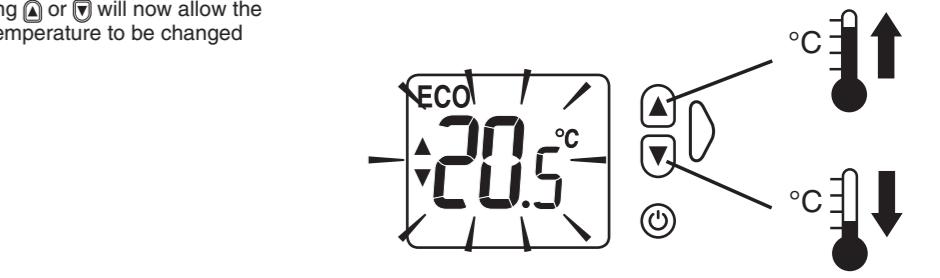




To exit ECO mode, press ECO
button again

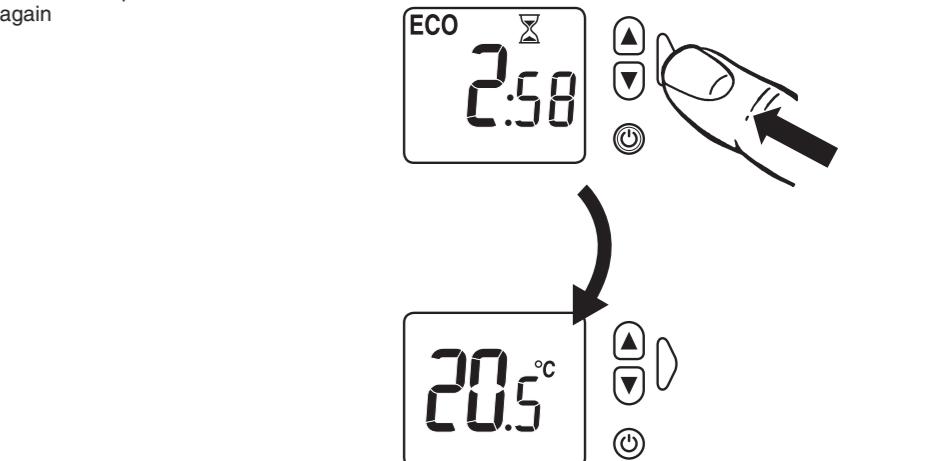

WIRED DIGITAL ROOM THERMOSTAT




Installation Guide

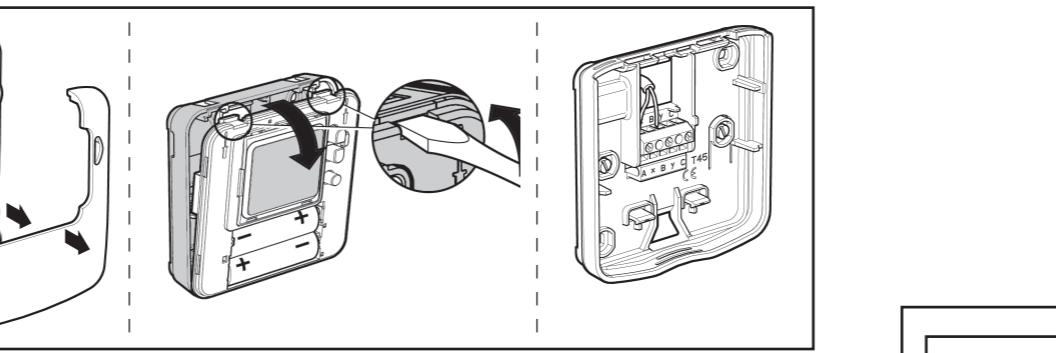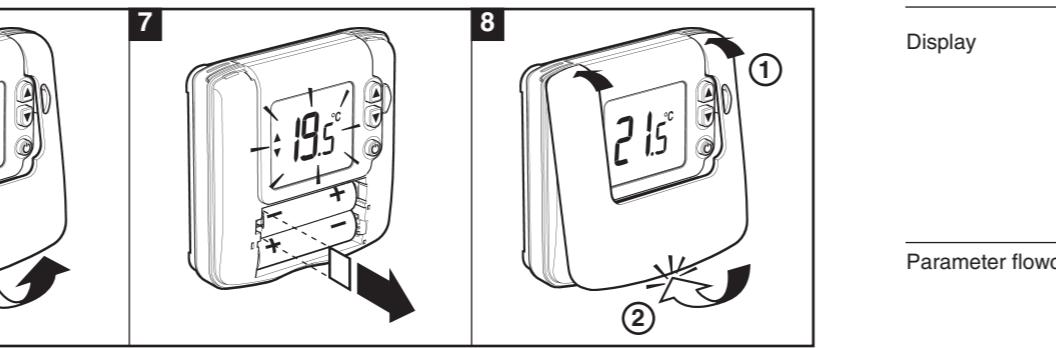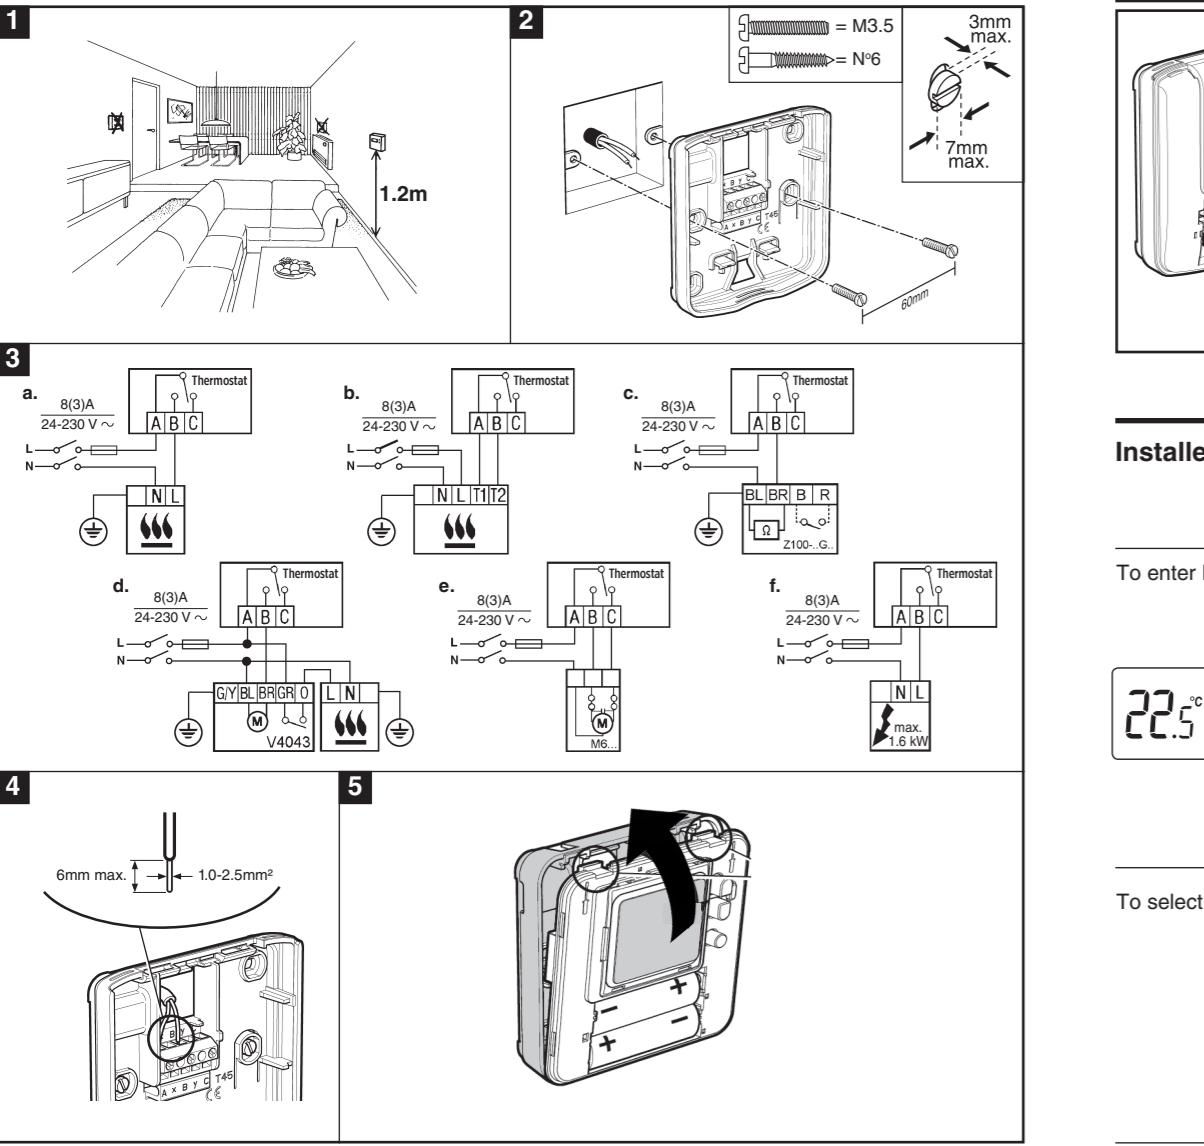


Installer Mode



To enter Installer Mode

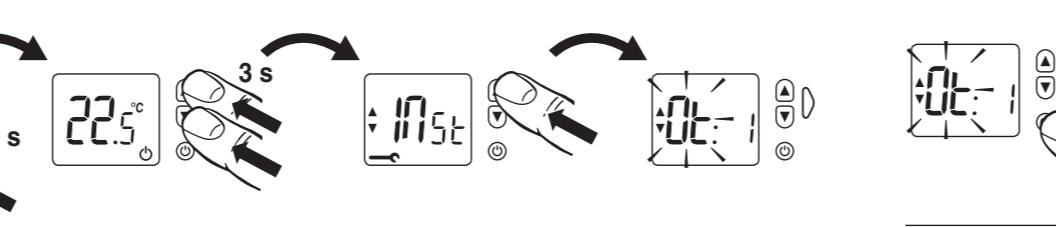

To select a parameter

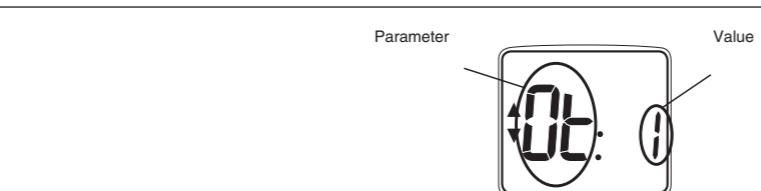

Parameter flowchart

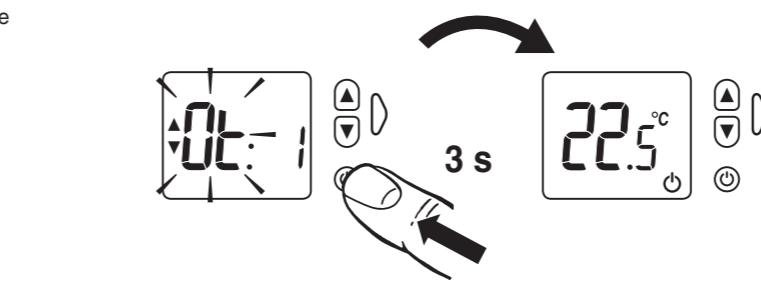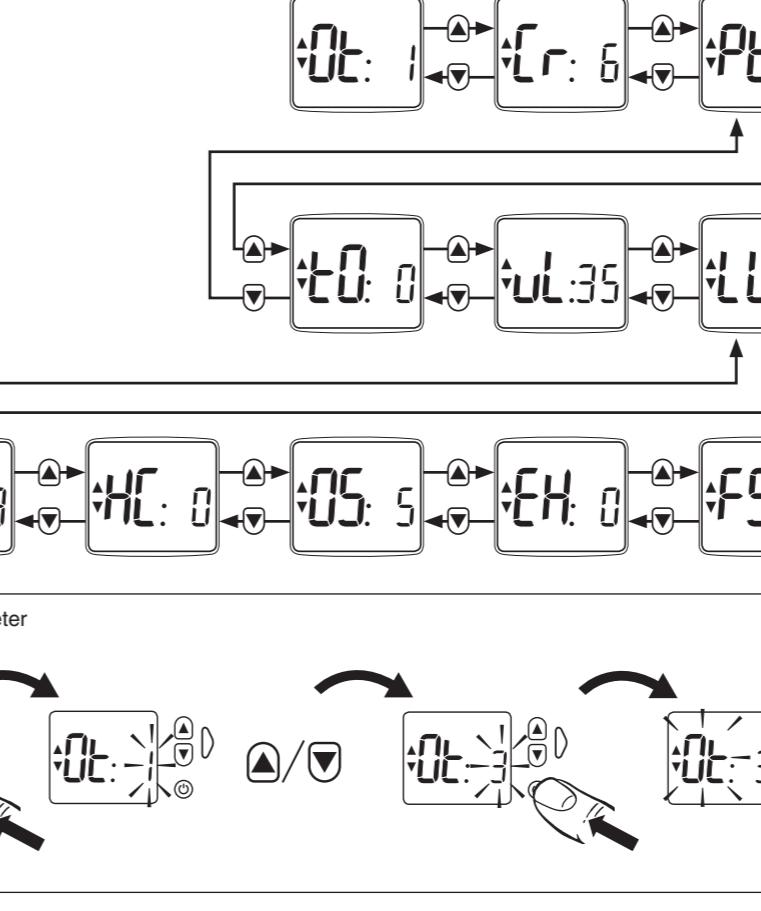

Display

Parameter

Value

Parameters

Description	Parameter	Range of values	Default
Minimum ON/OFF time	Ot	1,2,3,4,5 m	1 m
Cycle rate	Cr	{3,6,9,12}	6
Proportional band width	Pb	1.5 ... 3.0 K	1.5K
Temperature measurement offset	tO	-3 ... 3 K	0 K
Upper setpoint limit	uL	21 ... 35 °C	35°C
Lower setpoint limit	LL	5 ... 21 °C	5°C
ECO temperature	ES	5 ... 35 °C	18 °C
Heat/cool changeover	HC	0, 1 (0 = Disable) (1 = Enable)	0
Off setpoint adjust	OS	-- (= Off), 5...16°C	5°C
Electric heat	EH	0 (<3A) / 1 (3A – 8A)	0 (<3A)
Reset parameters	FS	0 / 1	1 (factory)



Primaflow F&P LTD, unit 1A Votec House, Hambridge Lane, Newbury, RG14 5TN
t: 01788 527701 w: primaflowfandp.co.uk

Registered office: Votec House, Hambridge Lane, Newbury RG14 5TN
Registered No. 02662075 England VAT No. 340 049 632