

BRISTAN


Installation Instructions & User Guide

Please leave these instructions with the end user

Product Code: DU SNK SS (D2)

Specifications

Inlet Water Temperature


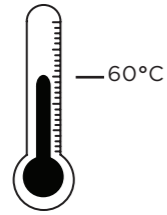


Maximum 60°C Recommended

Dynamic Water Pressure


Min: 0.2 bar

Max: 5.0 bar

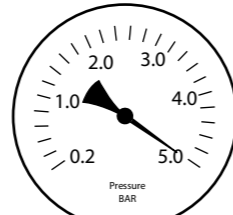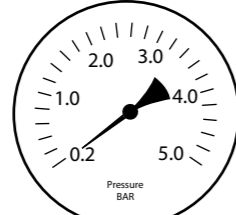

Maximum Static Pressure: 10.0 bar


Inlet Connections

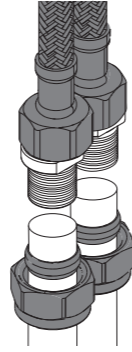

1/2" BSP Flexible Tails

* Connection adaptors not included

Tools You'll Need

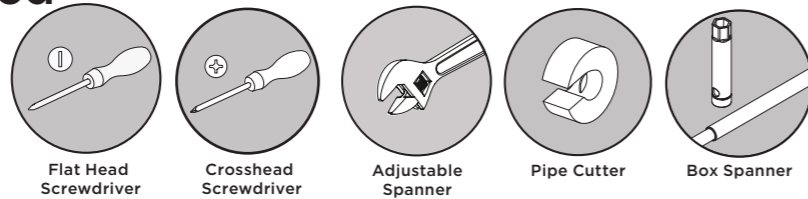

Flat Head Screwdriver

Crosshead Screwdriver

Adjustable Spanner

Pipe Cutter

Box Spanner

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of the Water Supply (Water Fittings) Regulations 1999 and current by-laws. For full Installation Requirements & Notes (IRN) please visit www.wras.co.uk/directory.

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.


Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

This product must not be modified in any way as this will invalidate the guarantee.

If in doubt, contact a registered plumber, your Local Water Authority or the Secretary of the Institute of Plumbing, address as follows:-

The Institute of Plumbing,
64 Station Lane,
Hornchurch,
Essex,
RM12 6NB, Tel: 01708 472791

Pack Contents

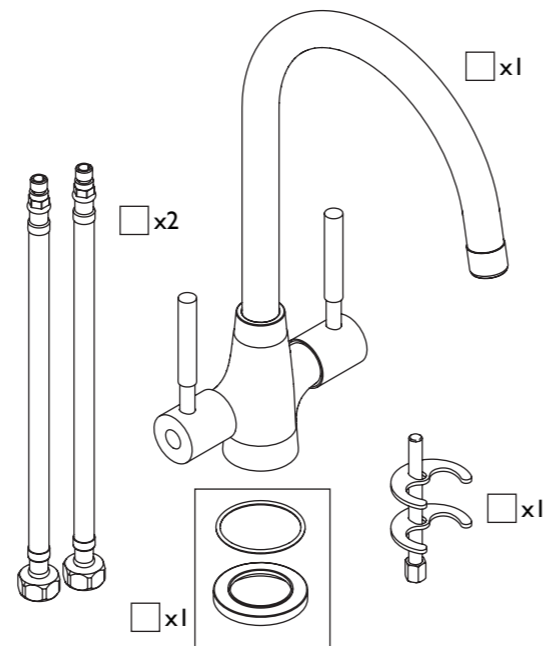



Spare Parts

To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.




Installation

1

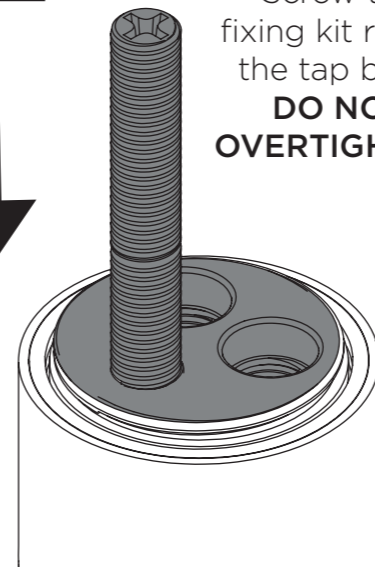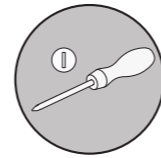

Screw the fixing kit rod to the tap base. **DO NOT OVERTIGHTEN.**





2

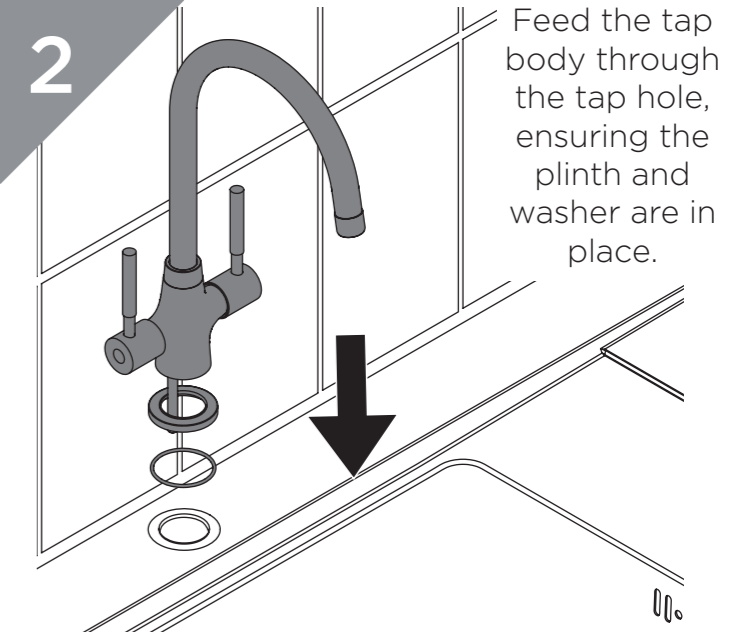

Feed the tap body through the tap hole, ensuring the plinth and washer are in place.

3


 
Secure the tap body using the fixing kit.

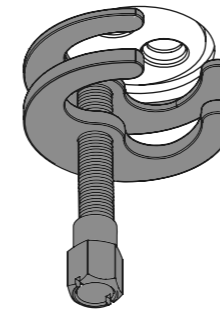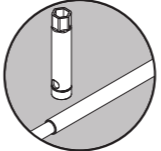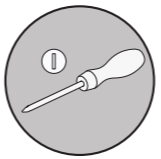

4



 Screw the flexible tails to the tap base by hand only. **DO NOT OVERTIGHTEN.**


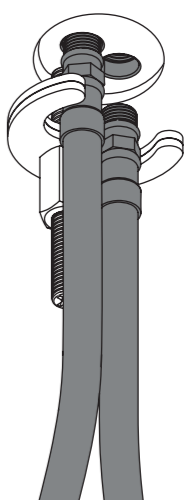



5




Connect the flexible tails to the hot and cold water supplies.

We would recommend that you install flat-faced isolation valves to the water supplies for safety and maintenance purposes

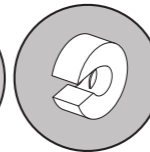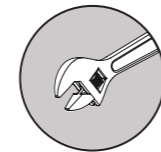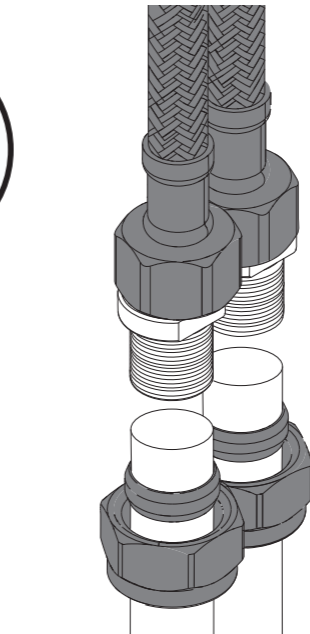

6

Operation

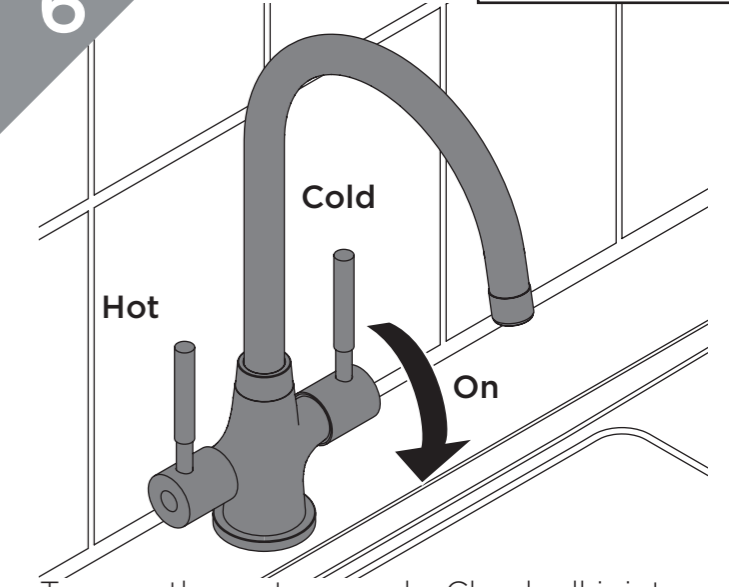

Turn on the water supply. Check all joints and connections for any leaks.

Your tap is now ready for use

Maintenance - Replacing Cartridge

1

Remove indice on underside of handle to reveal grub screw. Use a hexagonal key to remove grub screw and pull handle away from body.

2

Isolate the water supply before starting!

Unscrew top screw with a Phillips head screwdriver along with washer and spline adapter.

3

Unscrew the valve using a box spanner. Check any seals and O-rings for damage. Replace valve if necessary.

4

Reverse the steps to replace the valve and handle.

General Cleaning

Bristan products are made from premium materials, with hand polished, PVD, EPD or electroplated finishes.

Your tap should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Maintenance - Clean/Replace Outlet

1

Unscrew the aerator cover to remove the aerator and washer.

2

Check seals for damage. Soak using a suitable solution to de-scale.

3

Reverse the steps to replace the outlet.

| Troubleshooting | | |
|---------------------------------|---|---|
| Symptom | Cause(s) | Remedy |
| No flow or low flow rate | Partially closed isolation valve. | Open isolation valve. |
| | Head of water is below the minimum distance required. | Refer to your the Specification for the minimum working pressure/distance required. |
| | Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes. | Do not use other water outlets when using the taps. |
| | Airlock or partial blockage in the supply pipework or hoses. | Flush through pipework to ensure removal of debris and any airlocks. |
| | Water supply failure | Investigate water supply. Check your plumbing and heating systems for any faults. |
| Water dripping from taps | This is normal for a short time after using the taps. | This is caused by residual water tension, the build up of water in the tap body. |
| | If water continues to drip, possibly due to the ceramic disc valves/cartridge | Refer to the Maintenance section to replace the valves/cartridge. |
| Taps do not turn on | Closed isolation valve. | Open isolation valve. |
| | Mains water supply turned off. | Turn on mains water supply. |

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

Contact Us

BRISTAN

Bristan Group Ltd.

UK: Bristan Group, B78 1SG.
EU: Masco Europe S.à.r.l.
 14 Rue Strachen
 6933 Mensdorf
 Luxembourg

Customer Service: +44330 026 6273
Web: www.bristan.com
Email: enquire@bristan.com

A Masco Company

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees.

