

Introduction

A SALUS FC600 is a device suitable for controlling your fan coil unit in both 2 pipe and 4 pipe systems and for managing the temperature in your home and/or working environment. For an internet connection (Online Mode), this product must be used with the SALUS Universal Gateway (UG600/UGE600) and the SALUS Smart Home App 💮. You can also use the SALUS FC600 without an internet connection (Offline Mode). Go to www.salus-smarthome.com for the full PDF version of the manual. Product Compliance

This product complies with the essential requirements and other relevant provisions of Directives 2014/30/EU, 2014/35/EU, 2014/53/EU and 2011/65/ EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.saluslegal.com.

▲ Safety Information

Use in accordance with the regulations. Indoor use only. Keep your equipment completely dry. Disconnect your equipment before cleaning it with a dry towel.

Installation

Terminal Name	Function
L	230VAC Live input
Ν	230VAC Neutral input
V1	4 pipe: for Hot Water valve output
	2 pipe: for Heating or Cooling
V2	4 pipe: for Chilled water valve output
	2 pipe: no need to wire the V2 output
F1	Fan Speed control (Low level)
F2	Fan Speed control (Medium level)
F3	Fan Speed control (High level)
S1	Heat/Cool changeover or pipe sensor
S2	Occupancy sensor or external sensor
СОМ	Common Terminal





2

Ma

(((**(**)))

♠

м



Note: If you are using Wiring Option 1 please follow steps 5-12 below. If you are using Wiring Option 2 then please select the relevant settings for S1 and S2 from the table below.





S1 HCCOHeat/cool change overS1 AutoAuto heat cool changeoverS2 nofnNo functionS2 doorOccupancy sensor	S1 noFn	No function
S1 AutoAuto heat cool changeoverS2 nofnNo functionS2 doorOccupancy sensor	S1 HCCO	Heat/cool change over
S2 nofn No function S2 door Occupancy sensor	S1 Auto	Auto heat cool changeover
S2 door Occupancy sensor	S2 nofn	No function
	S2 door	Occupancy sensor
S2 sens External temperature sensor	S2 sens	External temperature sensor



9

Press UP/DOWN to select the operating mode. It can be 發, ∭ or ∭ 發 Press √ to confirm your



Changing from Offline Mode to Online Mode

If you want to use the internet App and the Universal Gateway, you need to change your thermostat settings from Offline Mode to Online Mode. For that please follow the steps below:









Installer Settings





Note: To view the full list of parameters, please consult the full manual at **www.salus-manuals.com**

Temporary Override





Note: The temporary override will be active until the next program starts. You can cancel the temporary Override by pressing Ms.



Factory Reset

If you have made an error or need to change your system parameters, or want to return to the factory settings, please follow steps below. By performing this action you will lose all your settings.







2

M



