

## MECHANICAL ROOM THERMOSTAT Installation Guide

TTHMT



50051981-004 A

**1**

230Vac

**2a**

**2b**

**3**

230Vac

1.0-2.5 mm<sup>2</sup>

8 mm max.

**4**

**1 Heating load**

MECHANICAL ROOM THERMOSTAT TTHMT

230Vac

10(3)A max

230V~ 50-60Hz

**2 Cooling load**

MECHANICAL ROOM THERMOSTAT TTHMT

230Vac

6(2)A max

230V~ 50-60Hz