

PROGRAMMABLE THERMOSTAT


User Guide

TTHWP, TTHWFP (Room Thermostat / Relay Box)



32341899-012 C

1 Screen and button overview

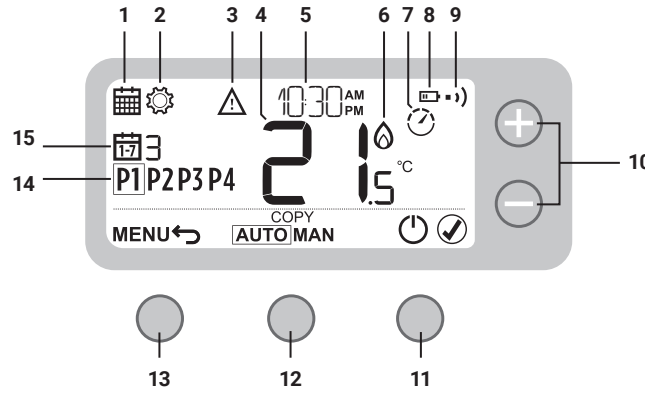


- 1 Programming Menu
- 2 Settings Menu
- 3 Alert
- 4 Room Temperature
- 5 Current time
- 6 Heat demand
- 7 Optimisation
- 8 Low battery
- 9 Wireless signal (TTHWFP only)
- 10 Temperature adjust buttons
- 11 Standby / Confirm button
- 12 Auto mode / Manual mode / Copy button
- 13 Menu / Back button
- 14 Schedule period
- 15 Day (1 = MON, 2 = TUE, ... 7 = SUN)

2 Programming the Schedule

Default Schedule


	P1	P2	P3	P4
🕒	6:30	8:00	18:00	22:30
🌡️	21°C	16°C	21°C	16°C

Adjusting the Schedule

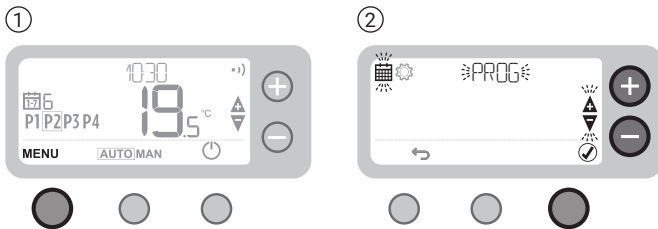


Press MENU

Select PROG then confirm

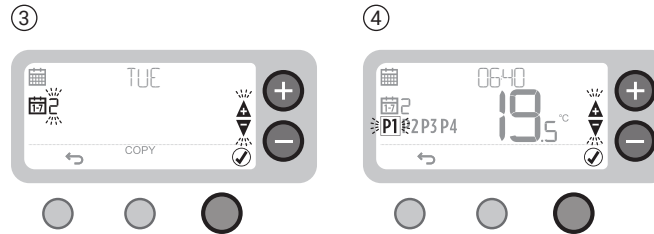

Select day then confirm


Select period then confirm

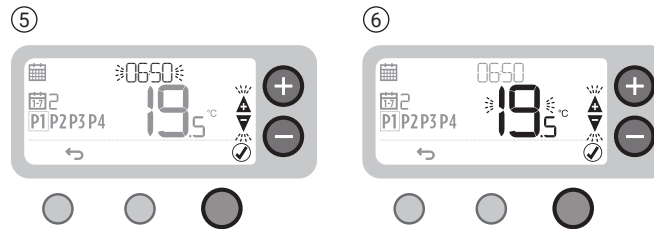

Adjust time then confirm

Adjust temperature then confirm

Copy Day

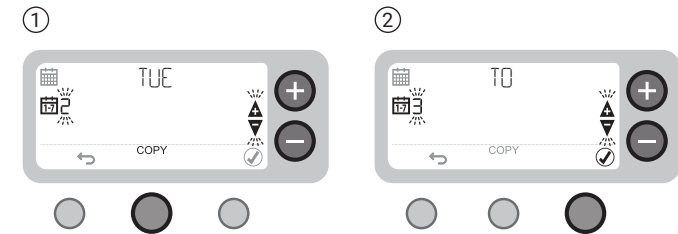


Select day then COPY


Select "TO" day then confirm

- 📅 1 = MON
- 2 = TUE
- 3 = WED
- 4 = THU
- 5 = FRI
- 6 = SAT
- 7 = SUN


3 Device Modes

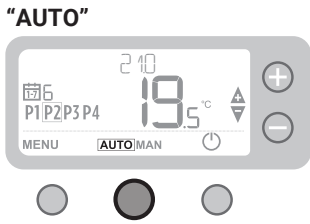

Programmed schedule is followed

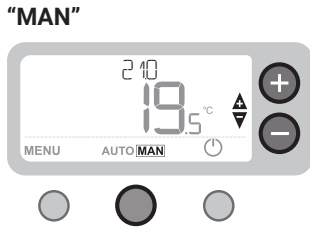


Only set temperature is followed

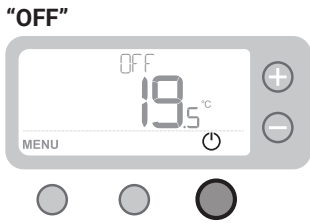


Heating is OFF

4 Temperature Override

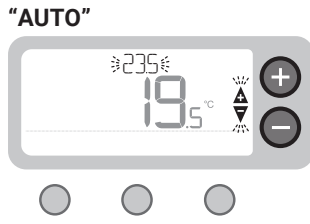


Temporary override until next programmed period

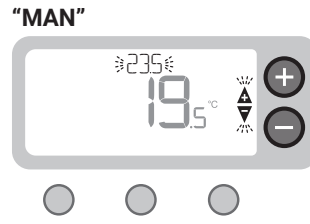


Permanent override until manually changed


5 Date and Time

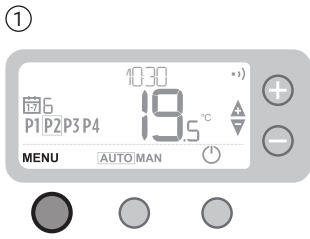


Press MENU

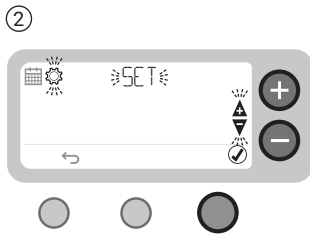


Select SETTINGS then confirm

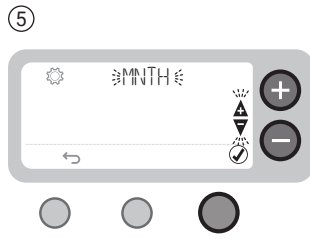


Set MONTH (1-12) then confirm

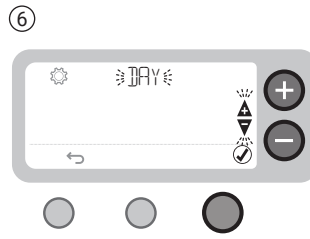

Repeat steps to set DAY, HOUR and MINUTE

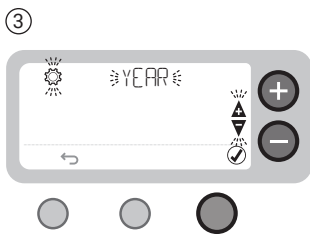

Select YEAR then confirm

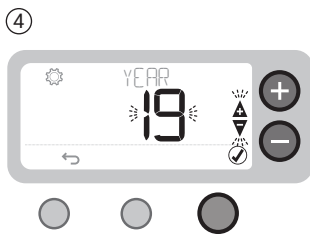

Set YEAR then confirm

6 Troubleshooting

10% battery power

Battery critical low

Faulty sensor

Wireless Programmable Thermostat and Relay Box only (TTHWFP)

Thermostat is flashing and Relay Box LED is flashing RED

Wireless signal lost - Move the Thermostat to another location to try and restore communication.

Thermostat is flashing and Relay Box LED is off.

Check Relay Box has power by pressing the button to switch boiler on. If Relay Box has power then no wireless binding data stored - contact your installer.

Relay Box LED is flashing RED slowly.

Relay Box is in binding mode - will time out of this mode after 3 minutes.

FROM
resideo
www.resideo.com

