




Pack Contents

2x Zero Anti-Freeze Valves

2x Zero Valve Insulation Jackets

2x Zero Guard Anti-Freeze Protectors

1x Tube of Condensate Pro Bond & Seal

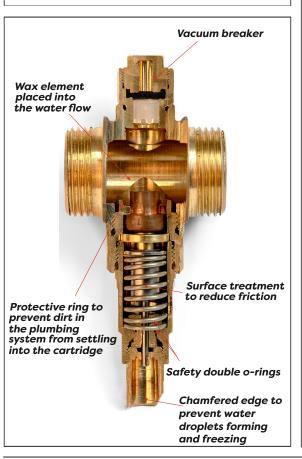

Product

AFCOMPACK - Zero 28mm Anti-Freeze Professional Installer Pack AFCOMPACK35 - Zero 35mm Anti-Freeze Professional Installer Pack AFCOMPACK1 - Zero 1" Anti-Freeze Professional Installer Pack AFCOMPACK114 - Zero 1 1/4" Anti-Freeze Professional Installer Pack AFCOMPACKSW - Zero 1" Swivel Anti-Freeze Professional Installer

AFCOMPACKSW35 - Zero 11/4" Swivel Anti-Freeze Professional Installer Pack

Technical Specification

Max Inlet Pressure (static):10 BarMedium:WaterSensitivity:± 1°COpening Temperature:3°CClosing Temperature:4°CWorking Temperature Range:0 to 80°CAmbient Temperature Range:-30 to 60°C

Max Discharge Flow Rate @ 3 Bar: 1.5 L/H

Kv: ZERO001 (55m³/h)

ZERO114 (70m³/h) ZERO28 (64m³/h) ZERO35(70m³/h) ZERO1SW (33m³/h) ZERO14SW (52m³/h)

Insulating

The patented Inta Zero Anti-Freeze Valves have been specifically designed to quickly and accurately react to the water temperature in the heat pump circuit and do not need the influence of the ambient temperature to operate.

Building regulations Part L states that all external fittings on an Air Source Heat Pump System must be fully insulated to reduce heat loss and maintain system efficiency. Inta Zero Anti-Freeze Valves will still maintain correct operation and discharge the water at the same temperature even when a system is correctly insulated.

The Inta Zero Anti-Freeze valves have been Independently tested using a controlled Ambient Temperature between -1°C to 1°C and starting water temperature 10°C to demonstrate the possibility of insulating the Inta Zero Valve without affecting the performance: Without Insulation

Water Discharge Temperature = 2.49°C

Time taken to begin discharge = 1 hour 4mins

With Insulation


Water Discharge Temperature = 2.03°C

Time taken to begin discharge = 4hour 3mins

Warning!

If the Inta Zero valves are insulated, then due care must be taken to ensure that all external pipework and fittings are fully and appropriately insulated and sealed. Failure to do so could prevent the proper operation of the Zero valve resulting in colder areas of a system being damaged by freezing. The Anti-vacuum valve must be kept clear at all times, Intatec recommend using the ZEROGUARD anti-vacuum cover (inspected on annual service).



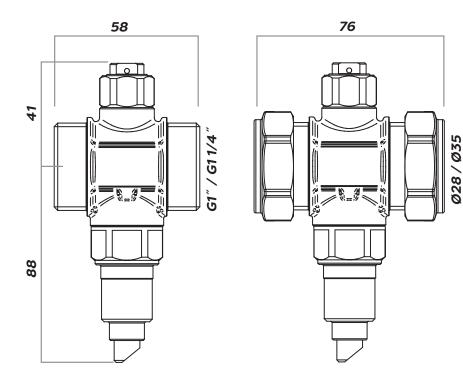

ZERO001 - ZERO114

ZERO28 - ZERO35

