


Installation Instructions

Two-Part Bath Screen
With & Without Towel Bar


Installation Instructions

Positioning

I.I Distance A = Wall to inside edge of bath.

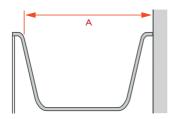

Distance B (screen profile) = Distance A + 10mm

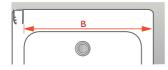


NB Screen must be set 10mm in from the bath edge in order for rubber seal to be water tight.

Fixing Rail

2.1 Place fixing rail against wall in correct position, mark drill points, then remove and drill holes for 8mm wall plugs.


Note: Please ensure the rail is plumb.

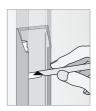

2.2 Apply an even covering of a silicone based sealant to the back of the fixing rail prior to fixing.

2.3 Fix the fixing rail to the wall with the screws provided.



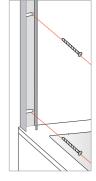


Positioning Screen


3.1 Position first section of screen into the fixing rail (approx. 25mm variation is possible here) ensuring that the seal is in place at the bottom of the glass.




3.2 Place second section of screen onto the bottom hinge of the first section with spacer block along the base of the glass to ensure that the hinge remains perpendicular.

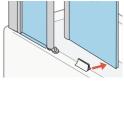

Fixing Screen

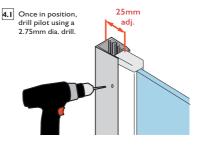


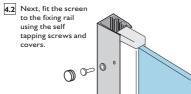


4.3 Remove the positioning block and replace with the rubber seal. Use just one of the chrome end caps to the outer of the seal strip.




To improve security of screen, fit wall bracket to the screen with fixing screw provided and then to the wall, ensuring that buffer pads are placed between the wall bracket and glass.

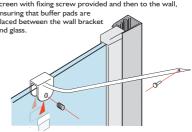

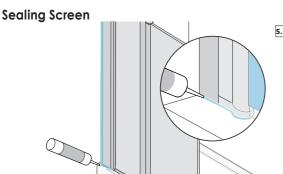

5.1 Using a silicone based sealer (always check product instructions to check if suitable), seal along the outside edge of the vertical fixing rail and the wall, as well as between the outside bottom of the screen frame (including pivot hinge section) and the bath.

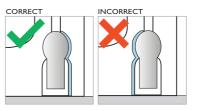

Fixing Towel Rail (optional)

6.1 If your screen comes with the optional towel bar then simply assemble the components as illustrated here and secure with Allen key provided.

