


TYBOX 157 and RF 642 Receiver instructions

Wiring for the RF 642 Receiver

From left to right:

- 1 – Live
- 2 – Neutral
- 3 – Live-in
- 4 – Switched-live out

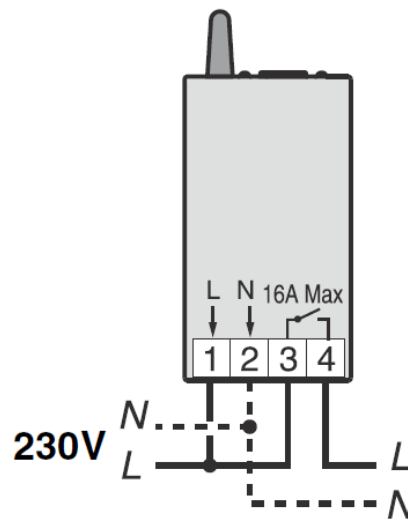

Association with TYBOX 157

Press and hold the button for 3 seconds, so that the LED light is flashing.

On the TYBOX 157 turn the dial to the power symbol, press the “i” button for 5 seconds until you enter the advanced menu. Then press the “R” button once to enter the association mode. Ensure the r-01 Menu is set to “0”

Press the “OK” button once to bring up the rAd1 menu, then the “i” button to begin the association. The LED Light on the receiver will stop flashing and products will be associated. Turn the dial clockwise to exit the advanced menu.

