



PLEASE RESPECT YOUR ENVIRONMENT!

Take care to dispose of this product and any packaging or literature in an appropriate way

WHAT IS A PROGRAMMER?

...an Explanation for Householders (as recommended by the Energy Savings Trust)

Programmers allow you to set 'On' and 'Off' time periods. Some models switch the central heating and domestic hot water on and off at the same time, while others allow the domestic hot water and heating to come on and go off at different times. Set the 'On' and 'Off' time periods to suit your own lifestyle. On some programmers you must also set whether you want the heating and hot water to run continuously, run under the chosen 'On' and 'Off' heating periods, or be permanently off. The time on the programmer must be correct. Some types have to be adjusted in spring and autumn at the changes between Greenwich Mean Time and British Summer Time. You may be able to temporarily adjust the heating programme, for example, 'Override', 'Advance', or 'Boost'. These are explained in the manufacturer's instructions. The heating will not work if the room thermostat has switched the heating off. And, if you have a hot-water cylinder, the water heating will not work if the cylinder thermostat detects that the hot water has reached the correct temperature.



This product and its associated documentation and packaging are protected by various intellectual property rights belonging to Honeywell Inc. and its subsidiaries and existing under the laws of the UK and other countries. These intellectual and property rights may include patent applications, registered designs, unregistered designs, registered trade marks, unregistered trade marks and copyrights.

Honeywell reserves the right to modify this document, product and functionality without notice. This document replaces any previously issued instructions and is only applicable to the product(s) described.

This product has been designed for applications as described within this document. For use outside of the scope as described herein, refer to Honeywell for guidance. Honeywell cannot be held responsible for misapplication of the product(s) described within this document.

Manufactured for and on behalf of the Environment and Combustion Controls Division of Honeywell Technologies Sarl, Ecublens, Route du Bois 37, Switzerland by its Authorised Representative Honeywell Inc.

Honeywell Control Systems Ltd.

Arlington Business Park,
Bracknell
Berkshire
RG12 1EB

Technical Help Desk: 08457 678999
www.honeywelluk.com

50022737-004 A
© 2007 Honeywell International Inc.



Honeywell



ST9400A – User Guide

1 Day Programmer, 2 channel



This document is to be left with the user
and forms part of a Home Information Pack

Features

Easy to use slider and buttons combined with 'LoT™' Technology and an 'OK' button, allows you to confirm changes and stay in control.

LoT™ Technology provides you with informative 'on-screen' feedback and operational assistance as and when required.

Extra Large LCD (Liquid Crystal Display) with Backlight provides added user friendliness and clearer viewing – even in the dark.

Independent 1-day Heating & Hot Water Programmes let you choose settings built into ST9400A for each day of the week to match your lifestyle, while maximising energy savings, or alter them to your personal settings.

Automatic Summer/Winter Time Change will adjust the clock forward and backward automatically when the clocks change, saving you having to change your ST9400A every time.

Built-in Memory holds your programme indefinitely - even if the mains power fails.


Energy Efficiency and the Environment

Home energy use is responsible for more than 1/4 of the total UK carbon emissions which contribute to climate change. Heating and hot water systems based on boilers account for 2/3 of this figure, so it is important to understand how your controls can help to maximize energy efficiency while maintaining your comfort.

Your Programmer should be used in conjunction with appropriate temperature controls. In order to save energy the following general points should be observed:

1. Ensure your system contains a room thermostat and a hot water thermostat, and that both are set to appropriate temperature levels: typically 20°C for the room temperature and between 55 - 60°C for the hot water temperature.
2. Programme your heating and hot water to be off when you are not in the house. If you are concerned about possible frost damage to any exposed pipe work, it is advisable to fit a frost protection system – your installer can advise you about this.
3. Think about how you use your domestic hot water – if you have a storage system, it is not necessary to have this switched on all the time, even when you are in the house.
4. Consider the heat up times required for your central heating. Every home responds differently when the heating is switched on. Adjust the start time so that you are not cold when you get up in the morning. A shorter heat up time is required for other heating periods.
5. In the evening, when the house is up to temperature, it is often possible to switch off the heating up to an hour before you go to bed, without any noticeable reduction in comfort.

ST9400A Controls Layout

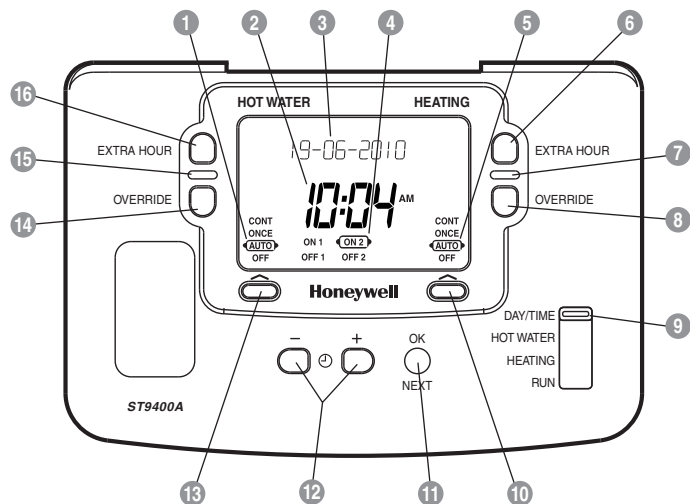

- | | |
|--------------------------------------|------------------------------------|
| 1 Hot Water Operating Mode Indicator | 9 Slider |
| 2 Time Display | 10 Heating Operating Mode Button |
| 3 LoT™ Technology Display | 11 OK/Next Button |
| 4 Programme Time Markers | 12 Clock – and + Buttons |
| 5 Heating Operating Mode Indicator | 13 Hot Water Operating Mode Button |
| 6 Heating Extra Hour Button | 14 Hot Water Override Button |
| 7 Heating Indicator Lamp | 15 Hot Water Indicator Lamp |
| 8 Heating Override Button | 16 Hot Water Extra Hour Button |

Keep this document in a Home Information Pack

Contents

WHAT IS A PROGRAMMER?	
General Description	3
The way to use a Programmer	3
GETTING STARTED WITH YOUR ST9400A	
Step 1: Setting the Date & Time	4
Step 2: Running a Built-in Programme	5
PROGRAMMING YOUR ST9400A	
The Built-in Programmes	6
Your Personal Programme	6
Reviewing the Programme Times	7
Modifying the Hot Water Programme	7
Exiting HOT WATER Programming Mode	8
Modifying the Heating Programme	9
Exiting HEATING Programming Mode	9
Disabling/Enabling Time Periods	9
OPERATING YOUR ST9400A	
Choosing the Operating Mode	10
Override the Operation Without Changing the Programmes	11
The Extra Hour Function	11
FINE TUNING YOUR ST9400A	
Changing From AM/PM Time display to the 24-hour Clock	12
Changing the Installer Parameters	12
FAQ & TROUBLESHOOTING	
How do I set the time only, if the ST9400A clock is not correct?	14
What do I do when the clocks go back in October and forward in March? ..	14
What should I do if I get 'lost' while programming the ST9400A?	14
What happens if there is a power failure?	14
Troubleshooting Guide	15
<input type="checkbox"/> MINI-PROGRAMMER OPERATING INSTRUCTIONS	
(Installer to tick if configured in this way)	
What is a Mini-Programmer?	16
Modifying the Heating & Hot Water Programme	16
Exiting HEATING & HOT WATER Programming Mode	16
Disabling/Enabling Time Periods	17
Choosing the Operating Mode	17
Override and Extra Hour Functions	17
Other Functions	17
CONFIGURATION & SERVICE DATA	
Configuration Data (to be completed by Installer)	18
Boiler & System Service Log	19

CONFIGURATION & SERVICE DATA

Boiler & System Service Log

The space below can be used to provide a record of boiler & system services and the names and contact numbers of the Installer and Service Personnel.

This information is important for a Home Information Pack.

Service/Installation Date	Installation/Service Engineer	Telephone Number / Contact Details

General Description

Your Honeywell ST9400A provides timing control for both your central heating and hot water systems, letting you set **ON** and **OFF** periods to suit your own lifestyle.

The ST9400A does not directly control the temperature but works together with other temperature controls, such as room thermostats and cylinder thermostats, to control your heating and hot water system in your home.

ST9400A has 1-day programming and 2 on/off periods per day. It is simple to use but still allows heating and hot water to be set at different times from each other.

The following instructions explain how to programme and use the ST9400A to provide the most home comfort at the least cost.

The way to use a Programmer

Think about the time periods when you are typically in the house and when you are not, and also the times when you use a lot of hot water. These are the times you should use as the basis for the programmes. It will be necessary to allow some heat-up time for the heating system after periods when it has been off – this would typically be 1 - 1½ hours, depending on your house and your preferences.

Other features are commonly available on the *Programmer* to enhance comfort and convenience, for example, **OVERRIDE**, **EXTRA HOUR**, and **MODE** buttons.

A typical use of the **OVERRIDE** feature is when you return home unexpectedly for the rest of the day and the heating is off. Just press the **OVERRIDE** button and the heating will come on until the next programme time, at which point it will follow the normal programme. The advantage here is that you do not have to remember to switch off because the normal time programme does this for you.

A typical use of the **EXTRA HOUR** button would be if you returned to the house for a short period when the heating and hot water were off. Pressing the appropriate **EXTRA HOUR** button gives you 1, 2, or 3 hours of heating, exactly when you need it. Another typical use is when the heating is already on and you want it to stay on a little longer - just press **EXTRA HOUR** and, for that day only, an hour will be added to the end of the time at which heating normally goes off.

The **MODE** buttons allow you to select how you want to operate heating and hot water independently. The most obvious use is to switch heating **OFF** during the summer months, but you may also use this feature if you take a mid-week day off work, you can then set the **MODE** to **ONCE** to keep the system **ON** during the day from the first programmed **ON** time till the last programmed **OFF** time.

GETTING STARTED WITH YOUR ST9400A


Your ST9400A should have been set up to work correctly when it was installed. However, the following will show you how you can modify your settings to meet your particular lifestyle.

To assist you with programming and everyday use your ST9400A will display text messages at every stage to help you get the most out of your central heating and hot water system. The ST9400A uses LoT™ Technology to constantly update the display to give you feedback about what is required.

Step 1: Setting the Date & Time

Your ST9400A had the date and time set at the factory, and these are normally maintained by a backup battery in the event of power failures. If you wish to change the date or time, or if the LoT™ Display shows the message 'SET DATE + TIME' just follow the instructions below. Otherwise, go to **Step 2**.

- Move the slider to the **DAY/TIME** position. The message 'SET DATE + TIME' will show briefly on the screen, followed by 'SET THE DAY', and the day of the month will now be flashing to indicate it can be changed.

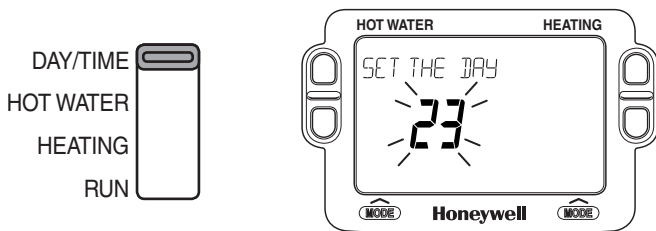

- To change the day of the month, press the \ominus \oplus or \ominus buttons until the correct day is shown. Each press of the button will change the date by one day. As soon as a change has been made, the message 'IS DAY OK?' will be displayed. Once the correct day is reached, press the green OK button to confirm, and move to the next step. If you do not need to make a change, just press the OK button immediately and this will move you to the next step.
- The month digits will now be flashing and 'SET THE MONTH' will be displayed. To change the month, press the \ominus \oplus or \ominus buttons until the correct month is shown. The message 'IS MONTH OK?' will be displayed. Press the green OK button to confirm the month is correct, and move to the next step.

- d. The year digits will now be flashing and 'SET THE YEAR' will be displayed. To change the year, press the \ominus \oplus or \ominus buttons until the correct year is shown. The message 'IS YEAR OK?' will be displayed. Press the green OK button to confirm the year is correct. If you have made a change, and the date is a valid date, the message 'DATE SAVED' will show, and you can move to the next step. If the date you set was not valid, for example 31 September, the message 'INVALID' will show and you will be returned to the start of the date setting operation.
- e. The time will now be flashing and the message 'SET THE TIME' will be displayed. To change the time, press the \ominus \oplus or \ominus buttons until the correct time is shown. Each press of the button will change the time by one minute. Holding the button down for more than a few seconds will change the time slowly at first, then quickly. The message 'IS TIME OK?' will be displayed. Press the green OK button to confirm the time is correct. If you have made a change, the message 'TIME SAVED' will show, followed quickly by 'DATE + TIME COMPLETE'.
- f. Move the slider to the **RUN** position, to complete setting the date and time.

Note: if the slider is moved at any time before the date and time have been set correctly, the message 'DATE UNCHANGED' will be displayed briefly, and your changes will not be saved.

Step 2: Running a Built-in Programme

With the date and time correct, your ST9400A Programmer will now be operating to the built-in programmes. These have been designed to provide heating and hot water at typical times throughout the day, but if you want to customise the settings, please see the next section '**PROGRAMMING YOUR ST9400A**' (page 6).

The Built-in Programmes

The built-in programmes give you a starting point that you can personalise to your own requirements. Your Installer should have selected one and ticked the box alongside it. If there is no tick, the product normally leaves the factory with Profile A installed, but it is a simple matter to select one of the other profiles (see **Changing the Installer Parameters**, page 12).

Built-in Programme (Profile A)

	ON 1	OFF 1	ON 2	OFF 2	ON 3	OFF 3
Heating	6:30am	8:30am	4:30pm	10:30pm	Not used	Not used
Hot Water	6:30am	8:30am	4:30pm	10:30pm	Not used	Not used

Built-in Programme (Profile b)

	ON 1	OFF 1	ON 2	OFF 2	ON 3	OFF 3
Heating	6:30am	9:30am	4:30pm	11:00pm	Not used	Not used
Hot Water	6:30am	9:30am	4:30pm	11:00pm	Not used	Not used

Built-in Programme (Profile C)

	ON 1	OFF 1	ON 2	OFF 2	ON 3	OFF 3
Heating	6:30am	7:30am	5:00pm	10:00pm	Not used	Not used
Hot Water	6:30am	7:30am	5:00pm	10:00pm	Not used	Not used

Your Personal Programme

The table below has been left blank for you to record your own personal programme. For ease of use, your ST9400A is supplied as standard with only 2 on/off's enabled. To enable ON/OFF period 3 see **Fine Tuning your ST9400A** (page 12).

	ON 1	OFF 1	ON 2	OFF 2	ON 3	OFF 3
Heating						
Hot Water						

Reviewing the Programme Times

To review your hot water programme, move the slider to the **HOT WATER** position.



To review your heating programme, move the slider to the **HEATING** position.

To review the programme times, press the **OK** button repeatedly. The appropriate **ON** and **OFF** markers will be displayed to show you which time is being reviewed. Any of these times can be adjusted by using the **+** or **-** buttons, and then confirmed using the **OK** button. Remember to return the slider to the **RUN** position after reviewing is complete.



Modifying the Hot Water Programme

The hot water programme has two pairs of **ON/OFF** switching times per day. Each time can be set between 3.00 am and 2.50 am (on the next day) to allow you to programme the hot water to stay on past midnight, if required.

- Move the slider to the **HOT WATER** position. 'SET HOT WATER' will show briefly to verify this action.

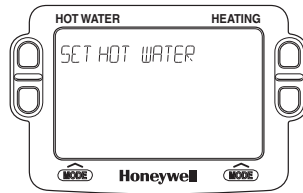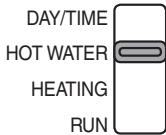

- 'SET ON-TIME 1' will then be displayed and the time setting for the first **ON 1** time will now be flashing to indicate it can be changed. If you do not wish to change the time, press the green **OK** button and move to the next step. If you do wish to make a change, use the **+** or **-** buttons to change the first **ON 1** time. Each press of the button will change the time by 10 minutes. As soon as the time has been changed, the message 'ON-TIME 1 OK?' will be displayed. Press the green **OK** button to confirm the time is correct and move to the next step. 'SAVED' will be displayed for a moment to confirm that any change has been saved to memory.

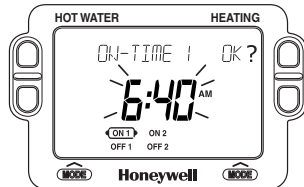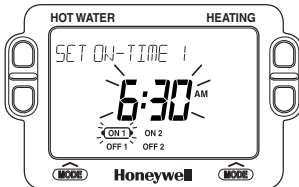

PROGRAMMING YOUR ST9400A

Note: When pressing the **+** button the next **ON** or **OFF** marker may start to flash. This indicates you have tried to set a time equal to one of the next programme times already in the memory. Similarly, when pressing the **-** button the previous **ON** or **OFF** marker may start to flash. This indicates you have tried to set a time equal to one of the previous programme times. If this happens the ST9400A simply moves both times together as long as you continue to press the **+** or **-** buttons. Follow the procedure in '**Reviewing the Programme Times**' (page 7) to check and adjust these times as necessary.

- c. 'SET OFF-TIME 1' will be displayed and the first **OFF 1** time will now be flashing. If you do not wish to change the time, press the green **OK** button and move to the next step. Otherwise, use the **+** or **-** buttons to change the time. Press the green **OK** button to confirm the time is correct and move to the next step. 'SAVED' will be displayed for a moment to confirm that any change has been saved to memory.
- d. The remaining **ON** and **OFF** times (ON 2, OFF 2) can be set by using the **+** or **-** buttons to change the time, and the green **OK** button to confirm the time is correct and move to the next step. If you do not wish to change the time, just press the green **OK** button to move directly to the next **ON/OFF** time without making any changes.
- e. After setting or reviewing the last off time, **OFF 2**, the message 'COMPLETE' will be displayed to indicate the times have been set.

Exiting HOT WATER Programming Mode:



To exit **HOT WATER** programming mode, move the slider to the **RUN** position. This can be done at any time during the programming process, and any changes made and confirmed with the **OK** button will have been saved.

Note: If the unit is left in **HOT WATER** Programming mode for more than 10 minutes without the slider being moved or any buttons pressed, the message 'MOVE SLIDER' will be displayed. Press a button to finish programming, or move the slider to the **RUN** position.

Modifying the Heating Programme

The heating programme has two pairs of **ON/OFF** switching times per day. Each time can be set between 3.00 am and 2.50 am (on the next day) to allow you to programme the heating to stay on past midnight, if required.

- Move the slide switch to the **HEATING** position. 'SET HEATING' will show briefly to verify this action.

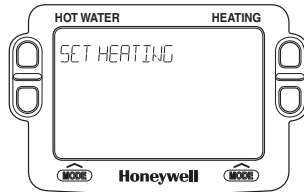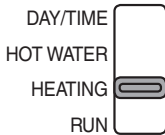

- Now follow the same procedure to set the times as described in 'Modifying the Hot Water Programme' (page 7) steps **b.** to **e.**

Exiting HEATING Programming Mode:

To exit **HEATING** programming mode, move the slider to the **RUN** position. This can be done at any time during the programming process, and any changes made and confirmed with the **OK** button will have been saved.

Note: If the unit is left in **HEATING** Programming mode for more than 10 minutes without the slider being moved or any buttons pressed, the message 'MOVE SLIDER' will be displayed. Press a button to finish programming, or move the slider to the **RUN** position.


Disabling / Enabling Time Periods (for Heating and/or Hot Water)

To disable any of the time periods **ON 1** to **OFF 1** or **ON 2** to **OFF 2**, simply set the **ON** time and its paired **OFF** time to the same time, and the programme will just ignore them.

To re-enable the time period, simply set the two **ON** and **OFF** times to be different.

Choosing the Operating Mode (for Heating and/or Hot Water)


The operating mode may only be changed when the slider is set to the **RUN** position.



A green **INDICATOR LAMP** shows when the heating or hot water is switched **ON**.

Two **MODE** buttons are provided to select the Operating Mode and therefore how the heating and hot water are controlled.

Heating has four possible **Operating Modes**; these are **OFF**, **AUTO**, **ONCE**, **CONT**. Pressing the heating **MODE** button scrolls round these modes in sequence, and the display indicates which mode is currently active.

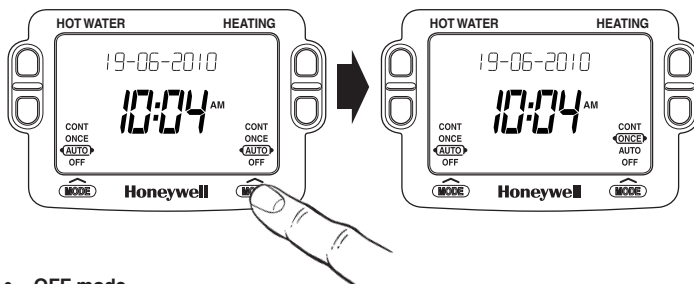

- **OFF mode**
The heating will remain **OFF**.
- **AUTO (Automatic) mode**
The heating will be switched **ON** and **OFF** according to the heating programme.
- **ONCE mode**
The heating will come **ON** at the first programmed **ON** time, and go **OFF** at the last programmed **OFF** time.
- **CONT (Continuous) mode**
The heating will remain **ON** continuously.

The hot water **MODE** button operates in the same way as described above for the heating **MODE** button.

Overriding the Operation Without Changing the Programmes

In **AUTO** and **ONCE** operating modes, the **OVERRIDE** buttons switch the heating or hot water **ON** or **OFF** without altering the programme.

When the indicator lamp is **ON**, pressing the **OVERRIDE** button switches the heating or hot water **OFF** until the next programmed **ON** time.

When the indicator lamp is **OFF**, pressing the **OVERRIDE** button switches the heating or hot water **ON** until the next programmed **OFF** time.

The LoT™ Display will provide you with information about the override.

The Extra Hour Function (for Heating and/or Hot Water)

The **EXTRA HOUR** buttons allow you to switch the heating or hot water **ON** for up to 3 extra hours without altering the programme. Pressing either button once will give one extra hour. The LoT™ Display will display the message '+ 1 HOUR', to confirm the button has been pressed.



When the green **INDICATOR LAMP** is **OFF**, pressing an **EXTRA HOUR** button switches the heating or hot water **ON** for just one hour.

When the green **INDICATOR LAMP** is **ON**, pressing an **EXTRA HOUR** button extends the programmed **ON** period by one hour.

Further presses of the **EXTRA HOUR** buttons will increase the extra hour period by one hour for each button press, up to a maximum of 3 hours. The LoT™ Display will continue to provide information on the extra hour status.

To cancel the extra hours, just keep pressing the **EXTRA HOUR** button until the 'CANCELLED' message appears on the LoT™ Display.

Changing from AM/PM Time Display to the 24 Hour Clock

Your ST9400A can operate on the 12 hour AM/PM or 24 hour clock formats. To change the format, ensure the slider is in the **RUN** position then press and hold the  and  buttons together for about 2 seconds. Ignore the 'NOT VALID' message that will appear briefly. All the displayed times will be automatically changed to the new format.

Repeating this procedure will change the clock display back to the original format.

Changing the Installer Parameters

The ST9400A has a special Installer Mode where some features can be adjusted to suit your lifestyle or preferences – these are called Installer Parameters, and are listed in the table below, along with a description of the options that are possible.

INSTALLER PARAMETER	Parameter Number	Default Value	Options	Description
24hr or am/pm clock display.	1	12	12, 24	12 = am/pm display, 24 = 24hr display
Configure backlight operation.	2	2	0, 1, 2	0 = off, 1 = on if button pressed, 2 = on continuously
Enable/disable auto time change.	3	1	0, 1	0 = disabled, 1 = enabled
Number of ON/OFFs per day.	5	2	2, 3	2 = 2 on/off per day, 3 = 3 on/off per day
Select default time programme.	6	A	A, b, C	A = standard, b = at home, C = economy
Configure Mini-Programmer. This will be set by your Installer and will depend on your system – do NOT change without contacting installer.	7	0	0, 1	0 = standard Programmer, 1 = Mini-Programmer
Reset all parameters	8	1	0, 1	0 = do not reset 1 = default parameters

To Enter Installer Mode:

- a. Ensure the slider is in the **RUN** position, then press and hold **OK** and **-** buttons together for 8 seconds. Ignore the 'NOT VALID' message that is displayed for a few seconds. The message 'SET UP MENU' will show briefly, followed by 'SET INSTALLER OK ?'
- b. Press the **OK** button to take you into the Installer Mode Parameter Menu.
- c. Parameter 1 is now available to change. This is to allow you to change the clock format from 12 hour AM/PM to 24 hour. At every step, the LoT™ Display will inform you what the parameter means and what option you have selected. The parameter number is shown on the display separated by a colon from the parameter value.
- d. You can change the parameter value by pressing the **+** or **-** buttons. At this point the description in the LoT™ Display will change and the parameter value will flash. If you press **OK** the value will stop flashing and be saved for use.
- e. Press **OK** to move to the next parameter available for editing.
- f. Keep pressing **OK** to step around the list of parameters, and use **+** or **-** buttons to change the parameter value.
- g. Any parameter changes that have been confirmed with the **OK** button will be saved and used.

To Exit Installer Mode:

- h. You can exit Installer Mode at any time by moving the slider to the next position and then back again to **RUN**.

Note: Installer Mode will exit automatically after 10 minutes if the slider is not moved.

How do I set the time only, if the ST9400A clock is not correct?

Your ST9400A contains a very accurate digital clock that is factory pre-set. Should you ever need to change the time, just follow this procedure:

- a. Move the slider to the **DAY/TIME** position.
- b. Keep pressing the green **OK** button until the message 'SET THE TIME' is displayed. To change the time, press the **+** or **-** buttons until the correct time is shown. The message 'IS TIME OK?' will be displayed. Press the green **OK** button to confirm the time is correct. If you have made a change, the message 'TIME SAVED' will show, followed quickly by 'DATE + TIME COMPLETE'.
- c. Move the slider to the **RUN** position, to complete changing the time.

What do I do when the clocks go back in October and forward in March?

Your ST9400A is factory-set to adjust the clock automatically at the correct dates, so you should never need to adjust the clock forward or backwards yourself. It is possible to disable this particular feature, as described in the section '**Changing the Installer Parameters**' (page 12). You may also check the section '**Configuration & Service Data**' (page 18) to see how your Installer has configured your product.

What should I do if I get 'lost' while programming the ST9400A?

The LoT™ Display on ST9400A will provide you with help and tips to work through the programming. Should you ever get 'lost', the simplest thing to do is to move the slider to the **RUN** position, and then move it back to the appropriate programming position where you got lost. At this point just follow the instructions again.

What happens if there is a power failure?

In the event of a mains power failure, the ST9400A display will go blank, the indicator lamps will go out, and the control outputs will switch off. The real time will be constantly maintained by means of the built-in battery backup, ready to power back up as if nothing had happened when the mains power is restored. In addition, all programmes and settings are stored in a special memory (called NV memory) which requires no power to maintain information, and so will be retained indefinitely.

Should the correct time and date ever be lost, for whatever reason, the message 'SET DATE + TIME' will be displayed whilst the slider is in the **RUN** position. In this case, simply follow the procedure described under '**Step 1: Setting the Date & Time**' (page 4). It should not be necessary to make any changes to your programmes.

Troubleshooting Guide

This is a quick guide to help you diagnose and cope with possible problems with ST9400A. For further assistance, please contact your Installer.

Symptom	Possible Cause	Remedy
ST9400A has a blank LCD display	No power to the heating system	Check that there is power to the heating system
	Fault in ST9400A	Call Installer
ST9400A indicates that Heating and/or Hot Water are ON , but radiators are cold and/or taps are running with cold water.	Temperature controls are switched off or set too low	Check that the temperature controls in the system are set to appropriate levels
	Boiler or other system controls have malfunctioned	Call Installer
ST9400A shows the message 'INTERNAL FAULT'	Fault in ST9400A	Call Installer
When the slider is moved to the HOT WATER position, the display shows 'NOT VALID'	ST9400A has been configured as a Mini-Programmer	Check the Contents page of this booklet or the ' Configuration & Service Data ' section (page 18) to see if your ST9400A has been configured as a Mini-Programmer. Call Installer to check if this is correct for your heating system.

MINI-PROGRAMMER OPERATING INSTRUCTIONS

You need only refer to this section if:

- The Mini-Programmer box is ticked on the Contents page of this booklet, or
- The ST9400A Configuration Data (page 18) indicates it is set as a Mini-Programmer.

What is a Mini-Programmer?

In a poorly controlled gravity circulation hot water system, whenever the boiler comes on to service the heating, there will inevitably be some circulation though the hot water storage tank, which will then heat up.

So, whenever the **HEATING** is **ON**, the **HOT WATER** is also **ON**.

It is therefore NOT possible to have independent programmes for heating and hot water, so it is only necessary to enter one time programme.

If you have this type of installation (gravity circulation hot water circuit WITHOUT a hot water control valve), your Installer should have restricted the ST9400A Programmer to be a Mini-Programmer.

This section describes how to use the product as a Mini-Programmer.

Modifying the Heating & Hot Water Programme

The heating & hot water programme has three pairs of **ON/OFF** switching times per day. Each time can be set between 3.00 am and 2.50 am (on the next day) to allow you to programme the heating & hot water to stay on past midnight, if required.

- a. Move the slider to the **HEATING** position. 'SET HEATING' will show briefly to verify this action.
- b. Now follow the same procedure to set the times as described in '**Modifying the Hot Water Programme**' (page 7) steps **b** to **e**.

Exiting Heating & Hot Water Programming Mode:

To exit **HEATING** Programming mode, move the slider to the **RUN** position. This can be done at any time during the programming process, and any changes made and confirmed with the **OK** button will have been saved.

Note: If the unit is left in **HEATING** Programming mode for more than 10 minutes without the slider being moved or any buttons pressed, the message 'MOVE SLIDER' will be displayed. Press a button to finish programming, or move the slider to the **RUN** position.

Disabling / Enabling Time Periods

To disable any of the time periods **ON 1** to **OFF 1** or **ON 2** to **OFF 2**, simply set the **ON** time and its paired **OFF** time to the same time, and the programme will just ignore them.

To re-enable the time period, simply set the two **ON** and **OFF** times to be different.

Choosing the Operating Mode

In a Mini-Programmer, some Operating Modes are not possible. For example, **HEATING** in **AUTO** mode and **HOT WATER** in **OFF** mode is not allowed. When configured, your ST9400A knows which combinations of Operating Mode are possible, and only permits those combinations that are allowed.

Override and Extra Hour Functions

When you use the hot water **OVERRIDE** or **EXTRA HOUR** functions, they will operate as normal. However, the heating **OVERRIDE** or **EXTRA HOUR** functions will also bring on the hot water. This is a consequence of the type of system you have, and is perfectly normal.

Other Functions

All other functions operate the in the same way as for the standard ST9400A.

CONFIGURATION & SERVICE DATA

Configuration Data (to be completed by Installer)

The table below is for the Installer to complete to indicate how your ST9400A has been configured.

Configurable Features	Options	Installer Configured (tick appropriate box)
24hr or am/pm clock display	am/pm display	<input type="checkbox"/>
	24hr display	<input type="checkbox"/>
Display backlight operation	Off	<input type="checkbox"/>
	On if button pressed	<input type="checkbox"/>
	On continuously	<input type="checkbox"/>
Automatic time change	Enabled	<input type="checkbox"/>
	Disabled	<input type="checkbox"/>
Number of ON/OFFs per day	2 on/off's per day	<input type="checkbox"/>
	3 on/off's per day	<input type="checkbox"/>
Default programme	A = standard	<input type="checkbox"/>
	b = at home	<input type="checkbox"/>
	C = economy	<input type="checkbox"/>
Set as Mini-Programmer *	No	<input type="checkbox"/>
	Yes	<input type="checkbox"/>

* **Note:** It is recommended that gravity circulation hot water systems are fitted with a suitable hot water control valve as shown in the Honeywell Sundial C Plan system (see ST9400A/ST9400C Installation Instruction sheet). If so, then there is no need to set the ST9400A as a Mini-Programmer.